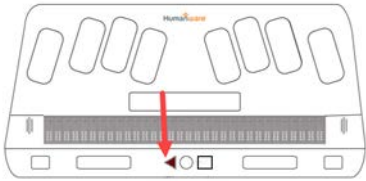

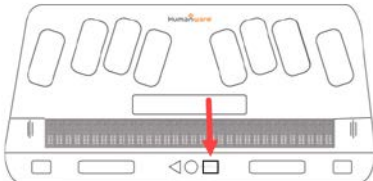

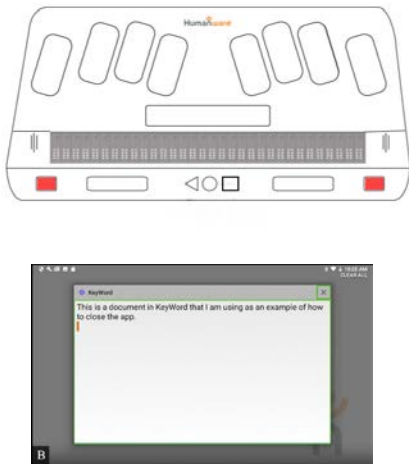
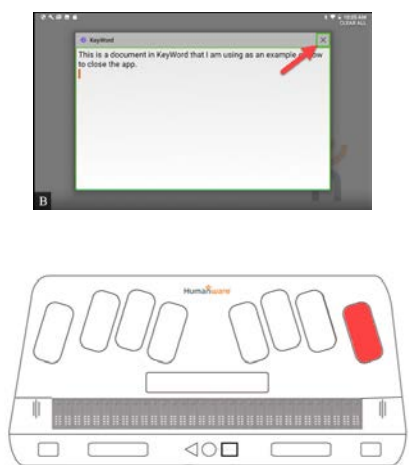
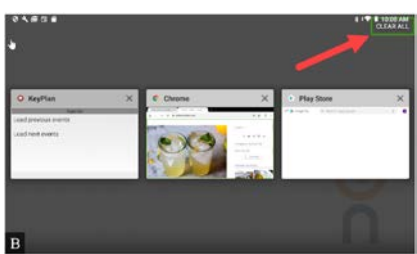


## BrailleNote Touch Plus

### Word Processor: 2.31 Exiting and Closing Applications

<p>1</p>	<p>To <b>EXIT</b> an application, press the triangular <b>BACK</b> button.</p> <p>OR</p> <p><b>SPACEBAR + E</b></p> <p>You will be brought back to the Main Menu. You may need to activate EXIT or the BACK button more than once to return to the Main Menu.</p>	 <p>OR</p> 
<p>2</p>	<p>Exiting does not <b>CLOSE</b> the application. To <b>CLOSE</b> an application, press the <b>RECENT APPLICATIONS</b> square button.</p> <p>Or</p> <p>Press <b>Space 2+3+5</b></p> <p>You will hear “Recent apps,” and the name of the area that you have landed on.</p>	 <p>OR</p> 

<p>3</p>	<p>Now that you are in the <b>RECENT APPLICATIONS</b> window, you have the option to either close one app or all open apps.</p> <p>To <b>CLOSE ONE APP</b> only, use the <b>NEXT</b> or <b>PREVIOUS</b> thumb keys to navigate to the app you want to close. There will be a green border around the selected item, and you will hear the name of the app.</p>	 <p>The image shows a top-down view of a HumanWare keyboard with several thumb keys highlighted. Below it is a screenshot of a mobile application window titled 'Keyword' with a green border around it, indicating it is selected for closing.</p>
<p>4</p>	<p>Navigate using the <b>NEXT</b> thumb key until you reach the <b>DISMISS</b> button, the 'X' in the top right corner. You will hear "Dismiss (name of app)."</p> <p>Press <b>ENTER</b> or a cursor routing key to activate, and the app will close, leaving you on the Recent Applications window. If there was only one app to close, you will be brought to the Main Menu.</p>	 <p>The image shows a screenshot of the 'Keyword' app with a red arrow pointing to the 'X' button in the top right corner. Below it is a diagram of the HumanWare keyboard with the red key highlighted, indicating the key used to activate the dismiss button.</p>
<p>5</p>	<p>To <b>CLOSE ALL RUNNING APPLICATIONS</b>, navigate to <b>CLEAR ALL</b> in the top right corner, using <b>PREVIOUS</b> and <b>NEXT</b> thumb keys. Press Enter or a Cursor Routing key to activate.</p> <p>You will be brought back to the Main Menu.</p>	 <p>The image shows a screenshot of the Recent Applications window with three app thumbnails: KeyPlan, Chrome, and Play Store. A red arrow points to the 'CLEAR ALL' button in the top right corner.</p>