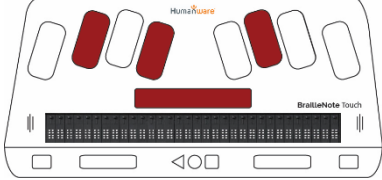
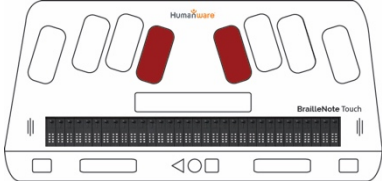
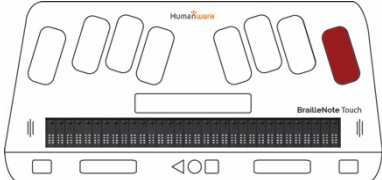
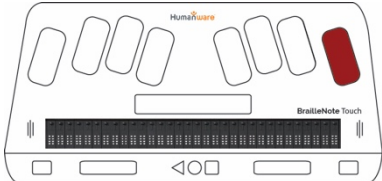
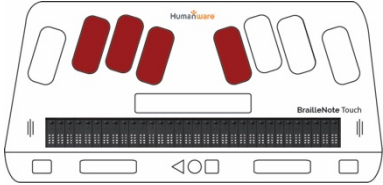
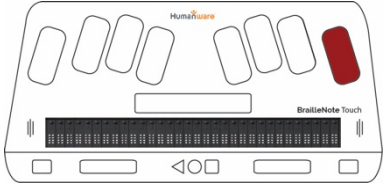

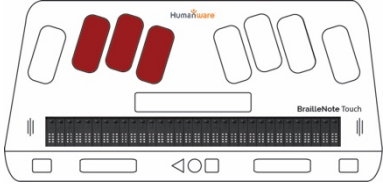
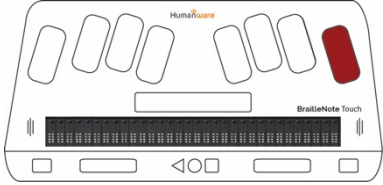
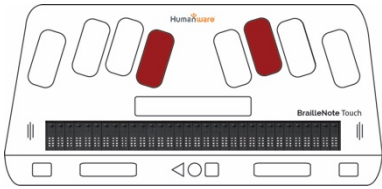
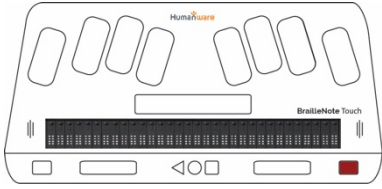
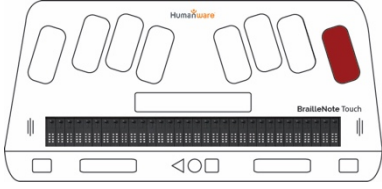
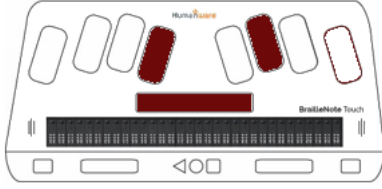
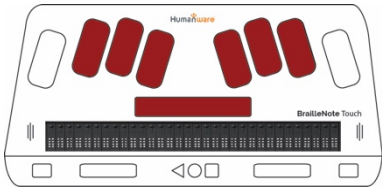


## 1.1 BrailleNote Touch Plus: Adjust Braille Settings

|          |                                                                                                                                                                                                     |                                                                                                                                                                                                |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1</p> | <p>To set the Braille code and grade on the device, you need to configure the <b>Language Profile</b>.</p> <p>Press <b>SPACEBAR + O</b> to open the <b>Options</b> menu.</p>                        |  <p>SPACEBAR + O</p>                                                                                        |
| <p>2</p> | <p>To navigate to and select <b>Configure Language Profiles</b>, use first letter navigation “C,” or navigate using the <b>NEXT</b> thumb key, then press <b>ENTER</b> or a cursor routing key.</p> |  <p>C</p>  <p>ENTER</p> |
| <p>3</p> | <p>Select <b>Primary Language Profile</b> or the language profile you wish to configure by pressing <b>ENTER</b> or a cursor routing key.</p>                                                       |  <p>ENTER</p>                                                                                             |

|          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                               |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>4</p> | <p>To navigate to and select <b>Preferred Braille Grade for Entry</b>, use first letter navigation, press “P.”</p> <p>By default, the setting should be set to “Literary braille.” The other option is for computer braille. If you’re fine with “Literary braille,” do nothing.</p> <p>To configure this setting, press <b>ENTER</b>.</p> <p>Tab to your selection using the <b>Next</b> button and press <b>ENTER</b> or cursor routing key to select the braille grade for entry.</p> |  <p>P</p>  <p>ENTER</p>  <p>Next</p> |
| <p>5</p> | <p>To navigate to and select <b>Literary Braille Table</b>, use first letter navigation, press L.</p> <p>To configure this setting, press <b>ENTER</b> or cursor routing key.</p>                                                                                                                                                                                                                                                                                                        |  <p>L</p>  <p>ENTER</p>                                                                                             |

|          |                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                               |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>6</p> | <p>In Canada, the braille standard is to use the contracted UEB code. This setting is listed as “English UEB Duxbury grade 2.”</p> <p>To quickly navigate to and select “English UEB Duxbury grade 2”, use first letter navigation, press “E.” Then tab to your selection using the <b>Next</b> button and press <b>ENTER</b> to select the braille grade for entry.</p> |  <p>E</p>  <p>Next</p>  <p>ENTER</p> |
| <p>7</p> | <p>Once you have adjusted the settings, exit the Options menu by pressing <b>SPACEBAR + E</b> to return to your previous location.</p> <p>To return to the Main Menu, press <b>SPACEBAR + 1-2-3-4-5-6</b> or the round <b>Home</b> button.</p>                                                                                                                           |  <p>SPACEBAR + E</p>  <p>SPACEBAR + 1-2-3-4-5-6</p>                                                                 |