

Connecting an Index Basic D Embosser to a Windows Device (via USB)


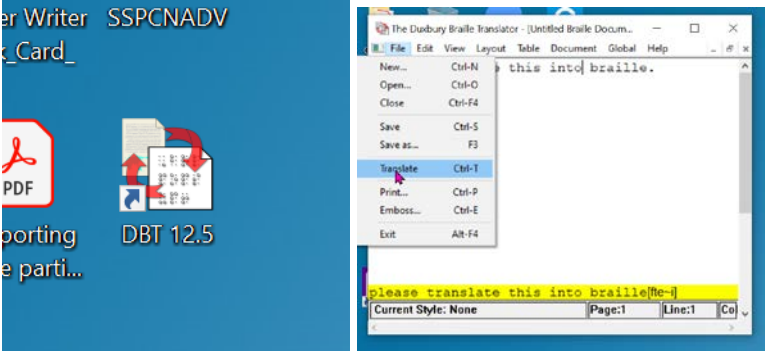
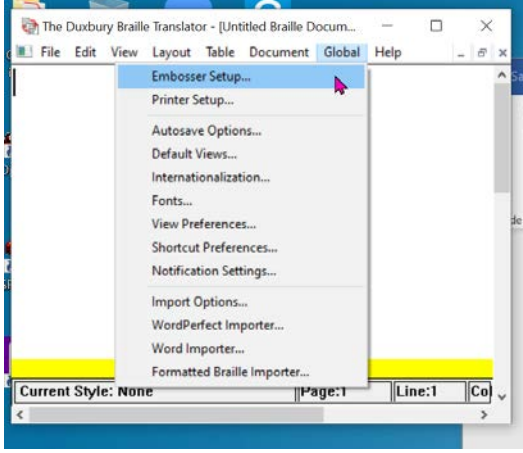
Introduction

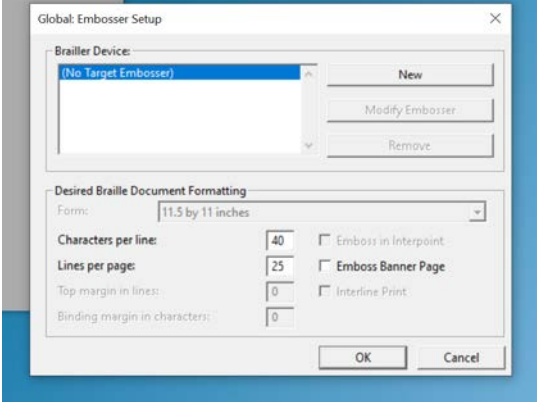
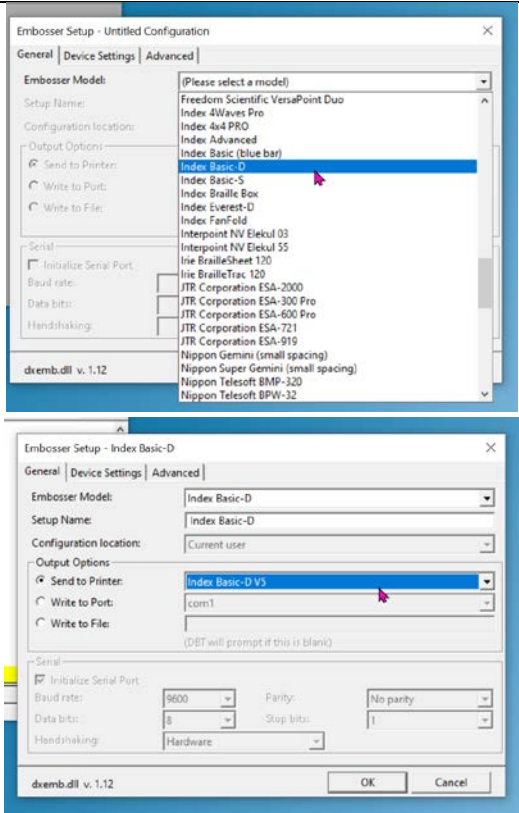
This tutorial walks you through the steps of connecting the Index Basic D Embosser to a Windows device via USB cable.

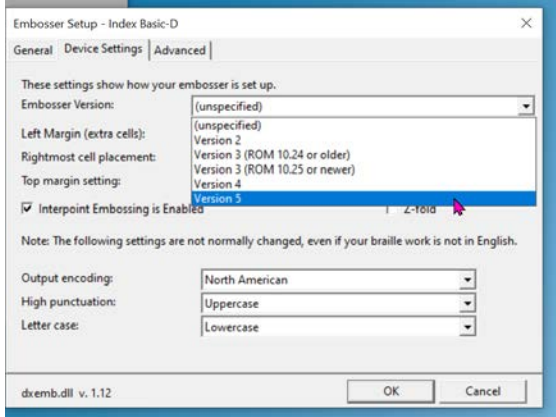
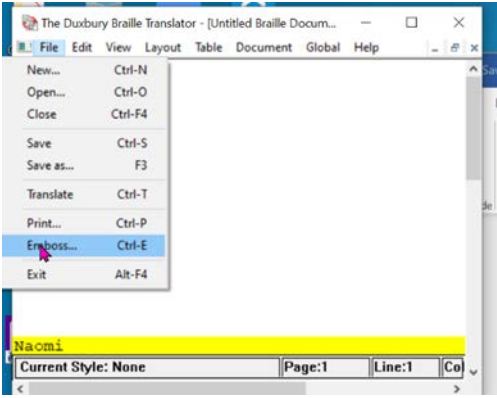
This tutorial assumes that you have

- An Index Basic-D Embosser (and have paper loaded)
- A Windows device
- The most recent update of Duxbury braille translator downloaded
- A document created in Duxbury

<p>1</p>	<p>Remove the green transport lock and store it on the transport lock holder.</p>	
<p>2</p>	<p>Connect the power cord and press ON to power up the printer with <i>no USB cord connected</i>.</p> <p>A blue light will flash during startup, and a moment or two later you will hear a loud sound and the embosser will announce its name.</p> <p>When the blue ON light is solid, the device is ready.</p>	
<p>3</p>	<p>Install the Printer Driver on your computer, from USB stick or the website https://www.indexbraille.com/en-us/support/downloads/drivers/older-versions-of-the-index-printer-driver/index-braille-printer-driver-8-2-1-5</p> <p>(If downloading from the website, you will first need to create a free account)</p>	

<p>4</p>	<p>The most reliable way to connect a device to the embosser is via USB cable.</p> <p>Connect the USB cable to the computer, then turn on the embosser. Windows will guide you to finish installing the driver.</p>	
<p>5</p>	<p>Open the Duxbury application and open your file.</p> <p>If the file is in print, it needs to be translated to braille. Click on Translate</p>	
<p>6</p>	<p>Click on the Global tab and select Embosser Setup</p>	

<p>7</p>	<p>In the Braille Device menu click on New.</p>	
<p>8</p>	<p>In the General tab scroll down under Embosser Model and select Index Basic-D (or the name of your embosser.)</p> <p>In Output Options and click on Send to Printer. Choose your embosser name. Click OK.</p>	

<p>9</p>	<p>Go to the Device Settings tab.</p> <p>Choose the Embosser Version to Version 5 (for Index Basic-D). Click OK to exit Embosser Setup.</p>	
<p>10</p>	<p>Click on File and scroll down to Emboss. Click on it.</p> <p>A printing window will open. Click OK.</p> <p>The embosser will begin printing.</p>	
<p>11</p>	<p>Troubleshooting</p>	<p>If the print window displays the name of another embosser, go to Printer Setup tab and check to see that your embosser it listed. Choose it and press OK.</p> <p>If you have more than one embosser listed under Global>Emboss Setup, “forget” or remove the unwanted embosser.</p>